


NBJA Jack Assembly Installation Instructions

- 1) The output jack is threaded into the rosewood jack body. Loosen the nut and turn the output jack counter clockwise to remove it from the body.
- 2) There are two contacts on the output jack. The short contact is the positive (+), and the longer bent contact (soldered to the remainder of the cable clamp) is ground (-). You will need to solder your pickup in accordingly.
- 3) The banjo jack assembly is secured to the tensioning hooks of the instrument in the same manner that a banjo armrest is attached. The two screws that go through the jack assembly thread into a 2" long aluminum nut that is slid in behind the hooks.
- 4) The jack assembly is normally placed at about the 4 o'clock position relative to the front of the banjo (when viewed from the front with the neck sticking straight up).
- 5) Remove one of the two mounting screws that go through the jack body and loosen the other screw almost all the way off.
- 6) From the end that you've removed the mounting screw, slide the aluminum nut as far as it will go in behind one of the tensioning hooks. Then, when there is clearance for the other end of the aluminum nut, slide the nut part way back so that the nut is behind both hooks.
- 7) Re-insert the screw that had been removed from the jack body.
- 8) Position the jack assembly and tighten the two screws to hold the NBJA securely in place.

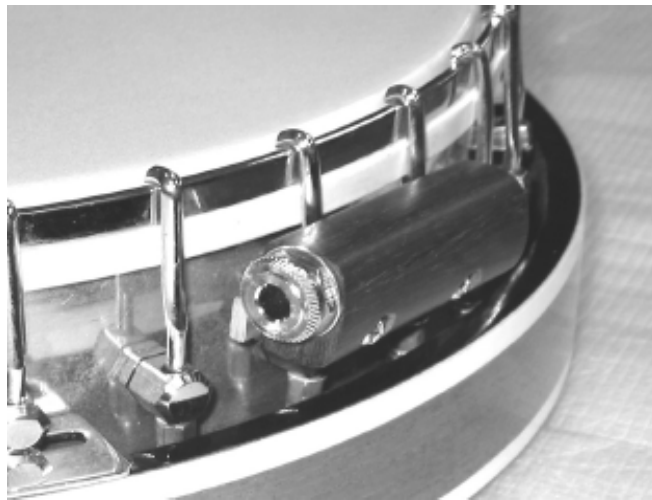

New Rosewood Bodied Jack Assembly

Instructions d'installation d'Assemblée de Cric NBJA

- 1) Le cric de rendement est fileté dans le corps de cric de bois rosier. Détachez l'écrou et tournez le cric de rendement dans le sens contraire des aiguilles d'une montre et enlevez-le du corps.
- 2) Il y a deux contacts sur le cric de rendement. Le contact court est le positif (+), et le contact coudé plus long (soudé au le reste du collier) est rectifié (-). Vous aurez besoin de souder votre collecte dedans en conséquence.
- 3) Le cric de banjo est fixé aux crochets de tension de l'instrument de la même manière qu'un accoudeur de banjo est - Nouveau cric assemblé sur un corps de bois de rosier - attaché. Les deux vis qui passent par le cric enfilé dans un écrou en aluminium de 2 " de long qui est glissé dedans derrière les crochets.
- 4) Le montage du cric est normalement placé à environ la position de quadrant (4 heures) relativement à l'avant du banjo (quand vu du devant avec le cou collant directement vers le haut).
- 5) Enlevez une des deux vis de support qui passent par le corps du cric et desserrez l'autre vis presque toute au bout.
- 6) De l'extrémité que vous avez enlevé la vis de support, glissez l'écrou en aluminium dans la mesure où il ira dedans derrière un de crochets de tension. Alors, quand il y a dégagement pour l'autre extrémité de l'écrou en aluminium, glissez l'écrou en partie en arrière ainsi que l'écrou derrière les deux crochets.
- 7) Réinsérez la vis qui avait été enlevée du corps du cric.
- 8) Placez le cric et serrez les deux vis pour tenir le NBJA solidement en place.